

To update the SLICE MICRO™ or SLICE NANO™ Base firmware, you need:


1. Hardware: SLICE USB cable or SLICE SSI Cable Kit.

2. Software: ZIP file (e.g., eSensing Firmware Updater 1.06.zip) extracted on your PC. The ZIP file contains the SLICE Firmware Updater program (eSENSING_FirmwareUpdater.exe) and required support files.

3. Firmware: Firmware version (e.g., SLICEBaseFirmware_BASE_00G6.sfw) you want to install.


4. Procedure:

1. With PC on, connect the SLICE Base to the PC via USB. Power-up the SLICE Base.
2. Start the SLICE Firmware Updater (eSENSING_FirmwareUpdater.exe). The screen will show the serial number of the connected Base:

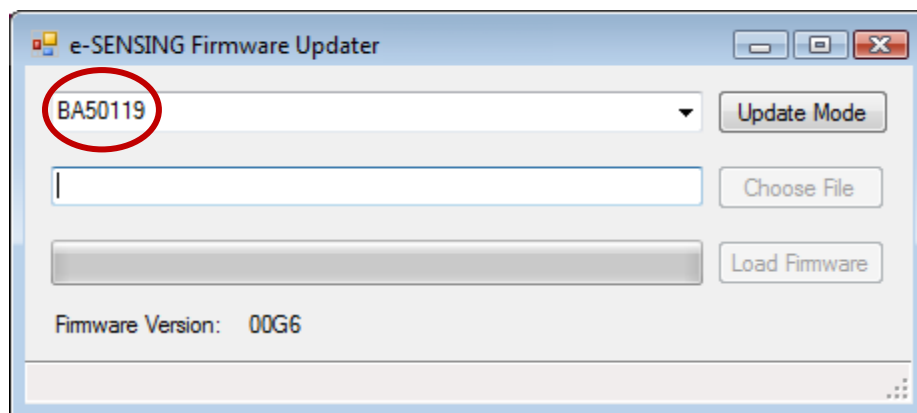

SLICE Base Firmware Update Procedure

- Press **Update Mode**. The SLICE LEDs will flash. SLICE will disconnect, then reconnect. The internal ID of the SLICE Base will be shown:

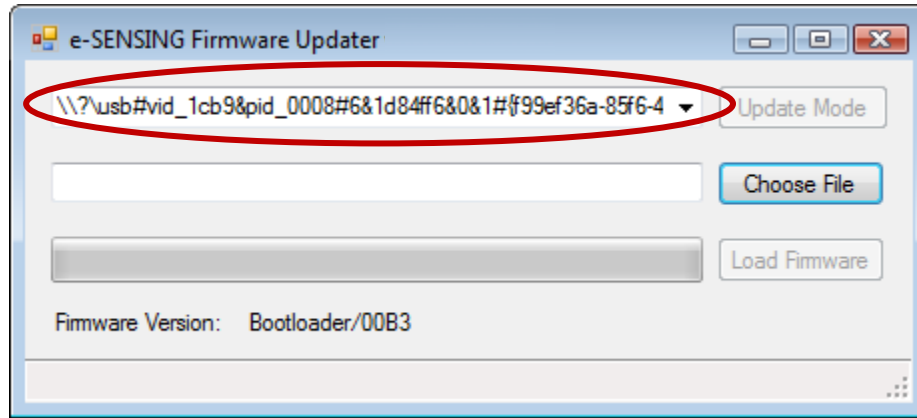

If this does not happen after 30 seconds, close then reopen the Firmware Updater program.

- Press **Choose File**. Select the file (e.g., SLICEBaseFirmware_BASE_00G6.sfw) you want to use for update.
- Press **Load Firmware**. The progress bar will show the progress of the firmware update. When the update is complete, the SLICE Base will reboot.
- After reboot, the serial number and new firmware version will be shown. The status bar will indicate that the firmware update was successful.

